



## Standard con guration




UV germicidal lamp x1

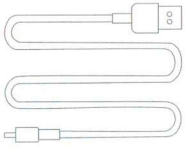


Charging x1

## Charging instructions



Laptop usb interface



Power Adapter



Mobile power

# Portable LED UV Disinfection Light



## User's manual

### Product parameters

size :  $\Phi 22 \times 276$ mm  
Deep Purple Power: 24mW  
Number of Lamps: 6 Pcs  
Deep purple wavelength: 275nm  
Lamp bead life: 10,000 hours.  
Warranty period: 2years.  
Estimated service life: 7 years. (According to the average daily use of 4 hours)



Charging parameters: 5V 1A  
Charging time: 2-3 H  
Continuous use time of one charge: 5-6 H

### Instructions for use


1. Hold the sterilizing lamp with the LED part facing down
2. Press and hold the switch for 3 seconds
3. Keep a distance of  $< 3$  cm from sterilized items
4. Turn on the purple light, and swing it back and forth evenly for 5-30 seconds
5. Press and hold the switch for 3 seconds again to turn off the power, and the sterilization is over

### Precautions

- Do not look directly at the UV lamp. Use it without people, pets, or plants. Prolonged exposure to ultraviolet rays may cause skin burns, irritation of the conjunctiva, and damage to plant cell walls.
- During use, the surface of the germicidal lamp should be kept clean. When dust or oil is found on the surface of the lamp tube, it should be turned off and wiped at any time, otherwise the germicidal effect of the lamp will be affected.

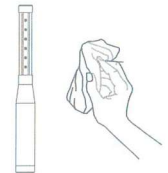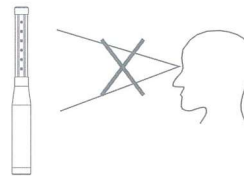

- When disinfecting the surface of an object with ultraviolet rays, the surface of the object to be irradiated should be directly irradiated within 3 cm of ultraviolet rays better results.
- When disinfecting pet houses and children's rooms, keep pets and young children away from UV lamps and ensure that they do not touch the disinfection table lamps and cause injuries.
- If there are calligraphy and painting collections or plants in the sterilized space, cover or remove them with cloth during use.

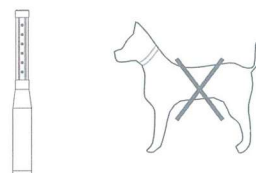

**Children are not allowed to use it.**  
**Do not look directly.**  
**Do not direct on the skin.**